
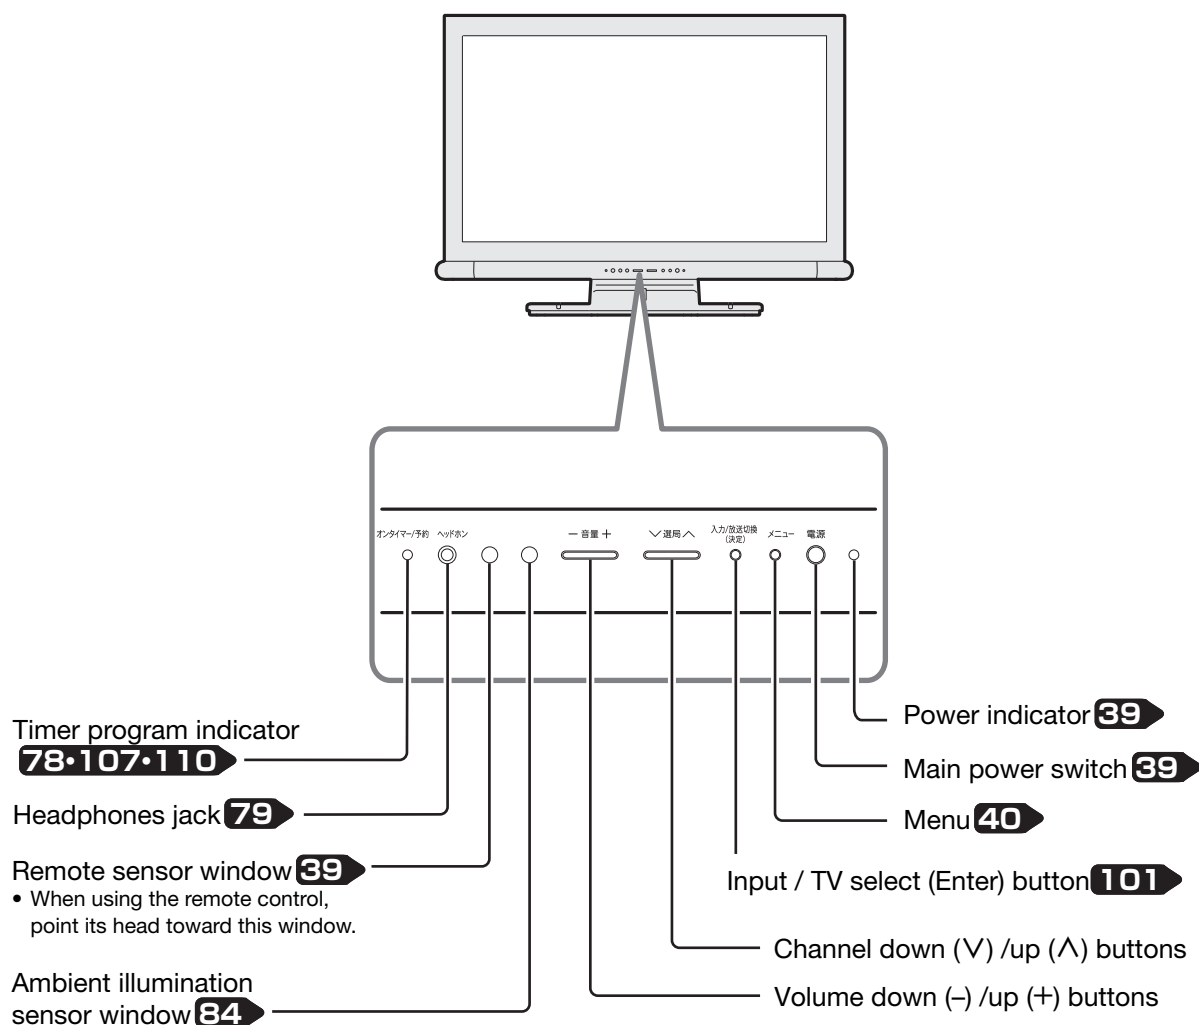


- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

### Front view




### Adjusting the LCD panel angle

- LC-32P1: The LCD panel can be tilted up to 2° forward, up to 6° backward.
- LC-26P1/LC-22P1: The LCD panel can be tilted up to 2° forward, up to 10° backward.
- Hold the stand firmly when you adjust the monitor's angle.

## Back view

The illustrations below are those of LC-32P1. LC-26P1/LC-22P1 has the same layout of jacks and terminals as LC-32P1.

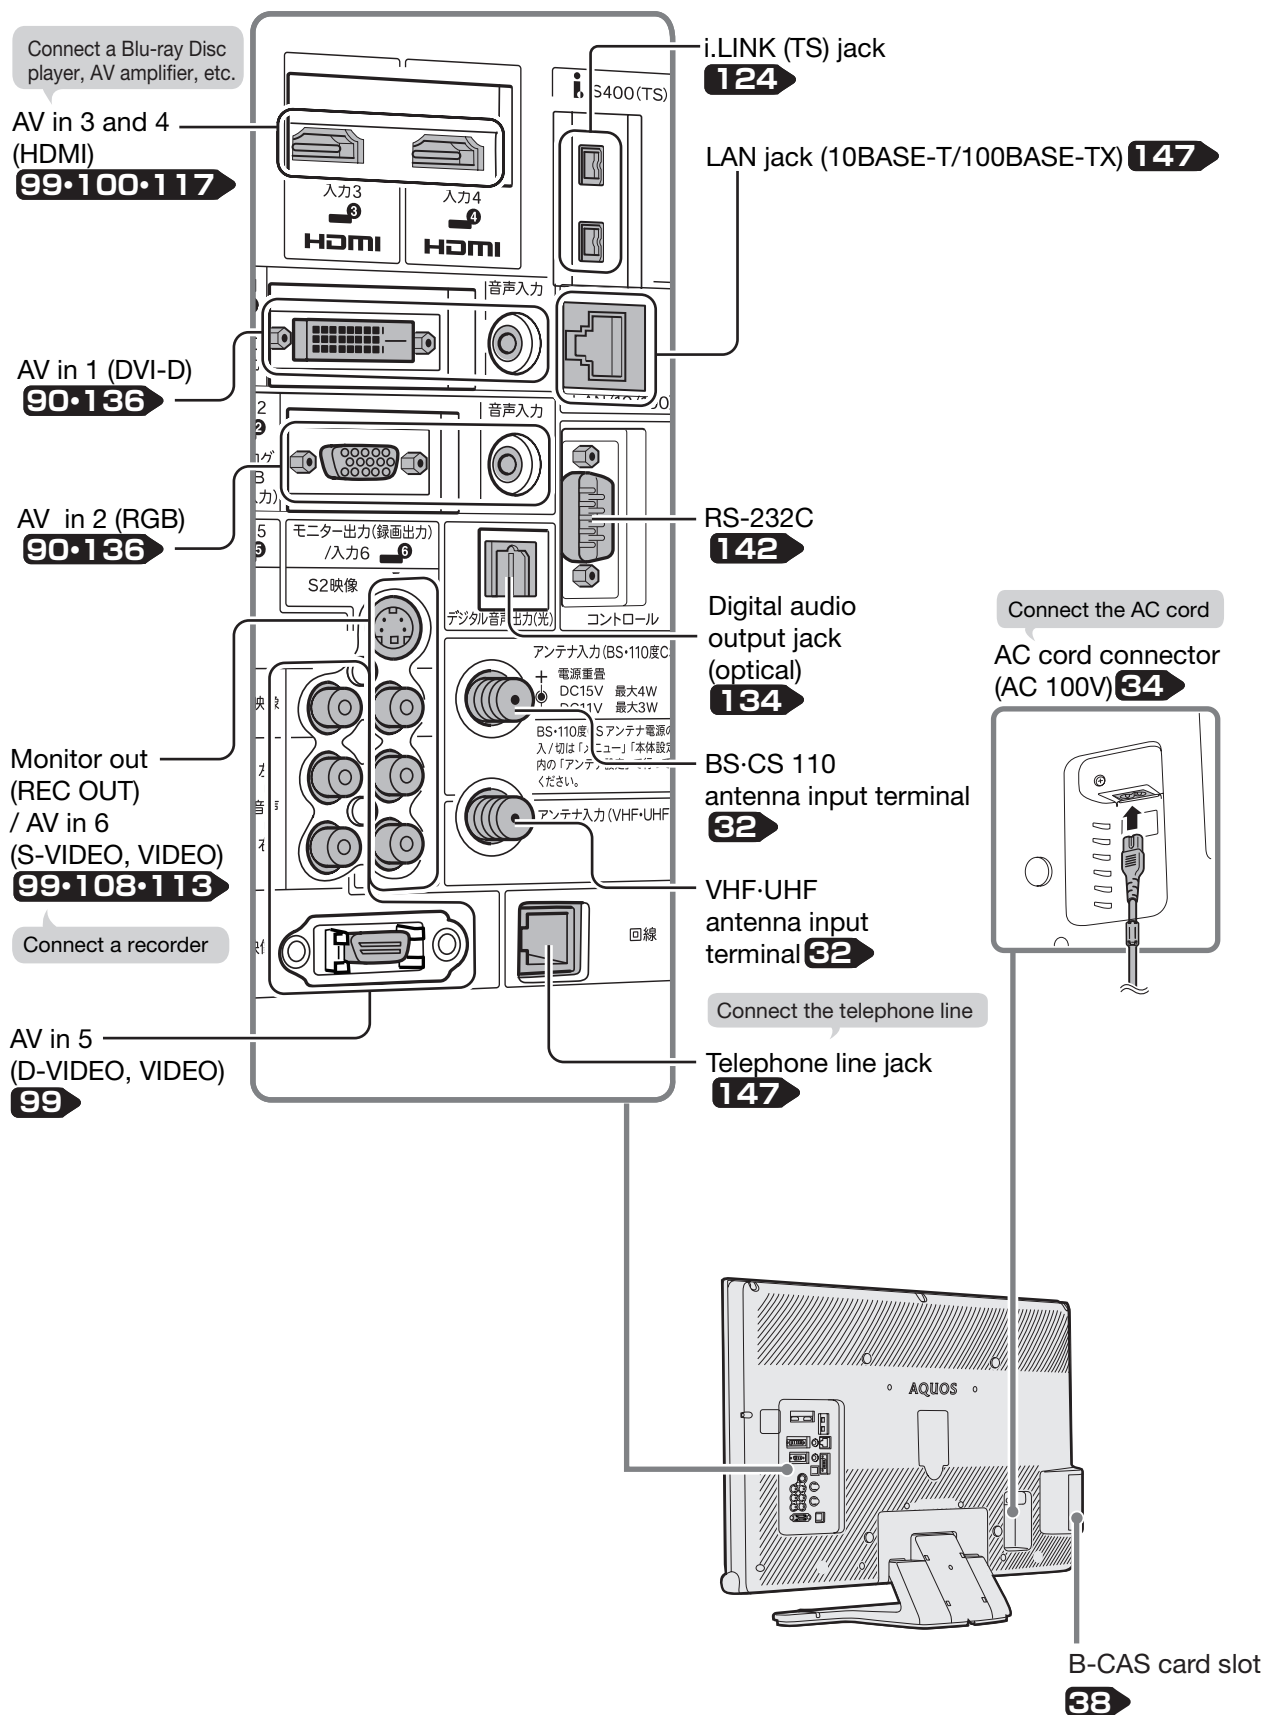

# Part Names – Remote Control Unit

## Display 60

Press to display or turn off the channel call, etc.

## Active/Standby 39

Press to engage the TV set in the active or standby mode.

## CATV 61

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

## Terrestrial analog select 60

## Terrestrial digital select 60

## BS select 60

## CS select 60

Select the CS digital channel for the first time. 37

## @ (linked data broadcast) 75

Press to call the data broadcast linked with the current digital TV program.

## Volume up (+)/down (-)

Press to adjust the volume.

## Mute

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

## Program info 74

Press to display detailed information on the current digital program.

## EPG 64

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## Other on-air programs 65

Press to display the EPG for currently on-air programs only (裏番組).

## Finish 40

Press to finish menu operation, etc.

\* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

## Screen mode 80

Press to select the desired screen mode.

## AV mode select 82

Press to select the picture/sound setting that best matches the current program.

## Freeze 74

Press to freeze the picture.

## i.LINK 126

Press to display the i.LINK control panel.

## Favorite channel select/register 61

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

## Familink 116

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

## Sleep timer 138

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

## Digital channel number input 61

Use to select a digital channel by entering the 3-digit channel number.

## Familink 116

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

## Channel select 60

- Press to select a channel.
- Use to input a number for various settings.

## Channel up (^)/down (v) 60

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

\* CATV channels are factory set to be skipped.

## Media select 60

Press to select the desired media (TV, radio, or data).

## Input select 101

Press to select the desired input.

## Menu 40

Press to display or turn off the menu screen.

*The menus can be displayed in English. See 183 for instructions on how to switch the display language.*

## Cursor (up, down, left, right) 40

Use to select a menu item, column, etc.

## Enter/Confirm 40

Press to confirm a selected setting or menu item.

## Return 40

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

## Color 66 • 67 • 75

Use to operate EPGs and data program screens.

## Picture select 71

Press to select the desired picture when watching a digital multi-picture program.

## Caption 71

Press to display, select, or turn off captions when watching a digital program with captions.

## Audio select 70 • 71

Press to select the desired audio.

## Split screen 72


Press to switch between the split screen mode and the normal screen mode.

## Operable screen 72

Press to switch the operable screen when the TV set is in the split screen mode.

## To open the cover

Hold the cover by the projections on both sides and lift upwards.

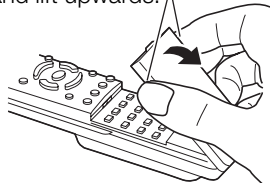

# Switching the Display Language to English

## メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



### ★ おしらせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

- Press**

**1** Display the menu screen.  
メニューを表示する
- 2** Select “本体設定”(Setup) — “Language (言語設定)”.

「本体設定」－「Language (言語設定)」を選ぶ

Enter.  
決定する


体設定 ... Language(言語設定)

音声調整 省エネ設定 本体設定 機能切換

かんたん初期設定	
地域設定	
チャンネル設定	
アンテナ設定	
スピーカー設定	
入カスキップ設定	
位置調整	
オートワイド	
映像反転	[しない]
クイック起動設定	[しない]
Language(言語設定)	[日本語]
時計設定	
個人情報初期化	

- 3** Select “English”.  
「English」を選ぶ

Enter.  
決定する

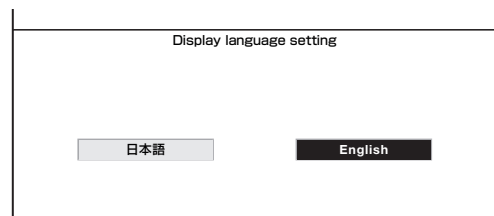

- The menu screen is now displayed in English.

画面表示が英語になります。

- 4** Finish this operation.  
終了する